


Fenêtre

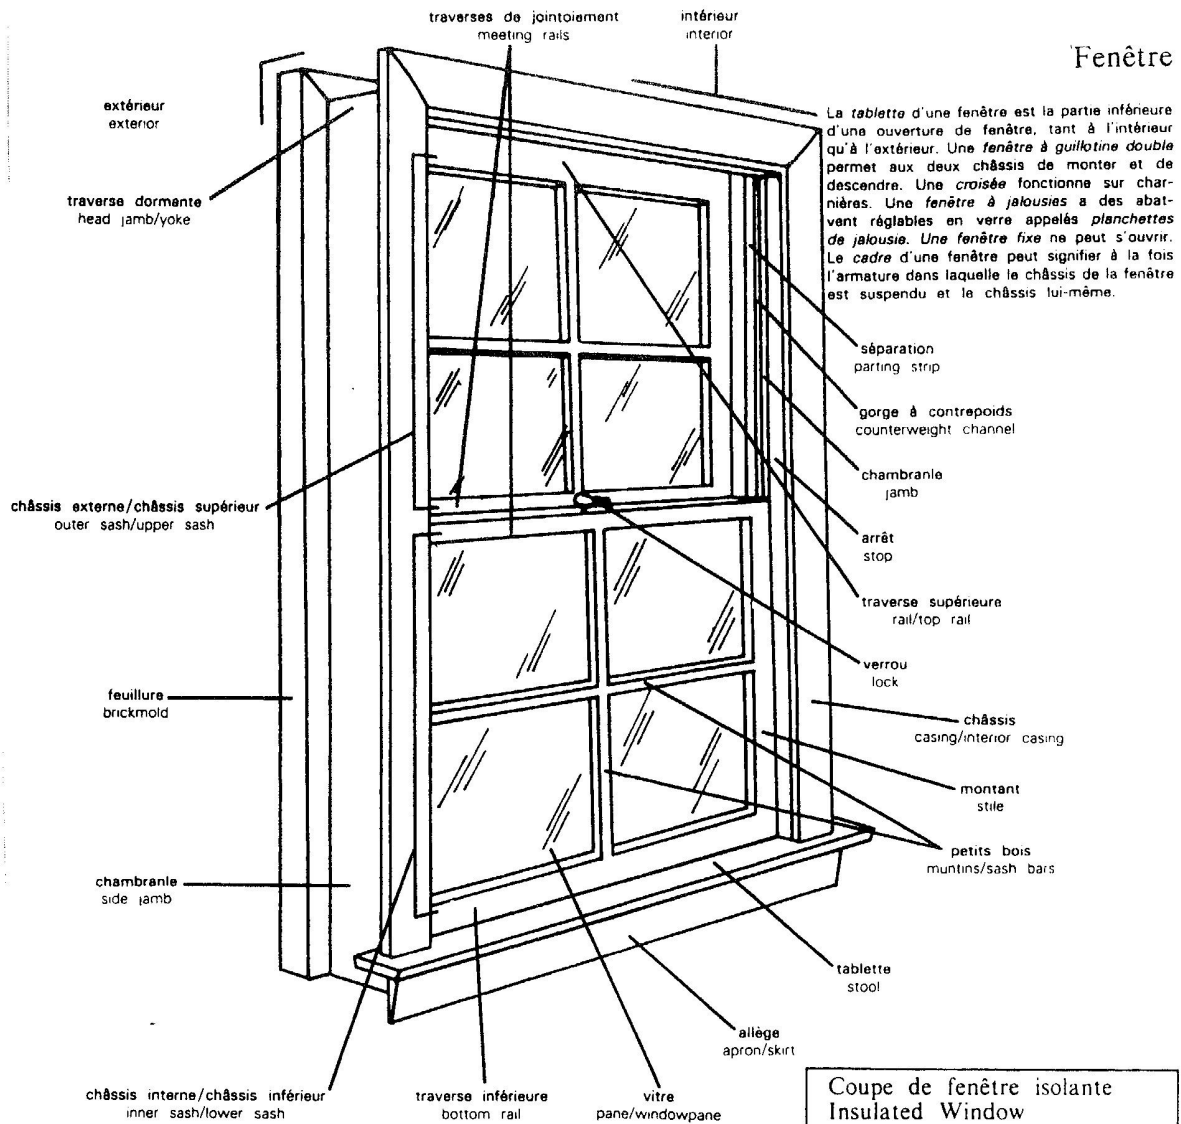

Window

A windowsill refers to the bottom part of a window opening, both inside and outside. A *double-hung window* shown here, allows the inner and outer sashes to move up and down freely. A *casement window* operates on hinges. A *jalousie window* has adjustable glass louvers called *slats*. A *fixed window* does not open. *Window frame* can mean either the casing in which the window sash is hung or the sash itself.

